


# WPS pro quick setup guide




WPS pro module has two external antennas – one for radio module and one for GPS receiver.



Use XLR breakout harness to connect via 2-wire communication or external trigger input.

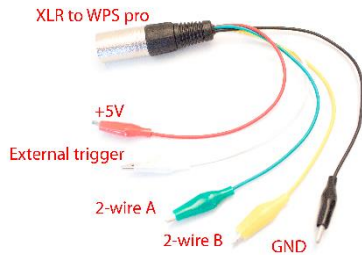


Connect red end of the CAT5 cable to WPS pro and yellow to WPS slot(s).

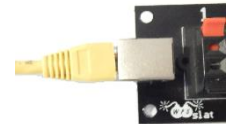

If you are not using WPS high quality CAT5 cables - please remove the clip on the end of plug where WPS pro is to be connected for easier connect/disconnect.

Plug the LiPo charger into the Power jack on the panel for easy charging. Once plugged in, charger indicator light will turn red. Light on the charger will turn green once battery has been fully charged.

**Note: For safety reasons do not leave charging unattended. For long term storage discharge battery slightly for longevity of LiPo battery. See User Manual section 3.1 for more details.**

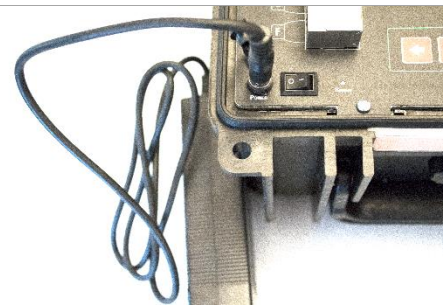

Have a question? Let us know and we will help.

Email: [support@wirelesspyro.co.uk](mailto:support@wirelesspyro.co.uk)

Phone: +44 (0) 7842 783136




## WPS mote quick setup guide



WPS mote has two external antennas – one for radio module and one for GPS receiver.



Use 3.5mm breakout harness to connect via 2-wire communication or external trigger input.

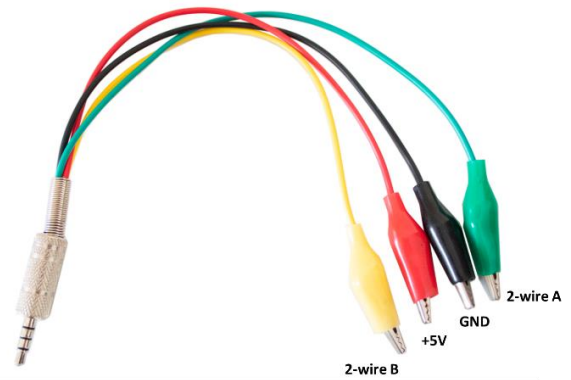

Use mini USB cable for charging. Red LED on WPS mote will turn on once charging and turn off when fully charged. Charging at max 1A current.



Have a question? Let us know and we will help.  
Email: [support@wirelesspyro.co.uk](mailto:support@wirelesspyro.co.uk)  
Phone: +44 (0) 7842 783136

